
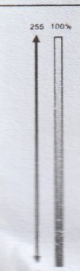
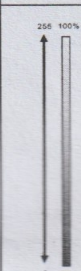
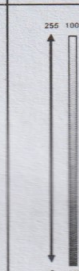
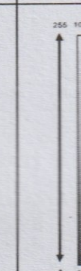
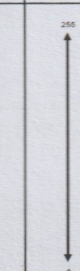
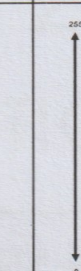
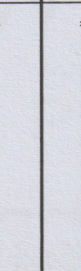
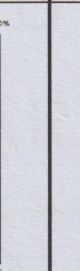


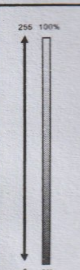




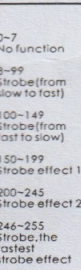
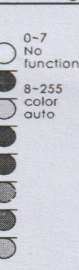
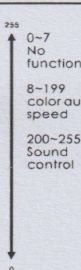


# HighNoon 10.1w LED with IP DMX Connectors

## 8CH Channel Mode

1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH	8 CH
Dimmer	Strobe	Red	Green	Blue	White	UV	Anbe
							
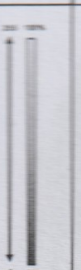
## 11CH Channel Mode

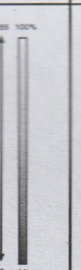1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH	8 CH	9 CH	10 CH	11 CH
Dimmer	Red	Green	Blue	White	UV	Anbe	Color	Strobe	color walking	Sound control
								 <p>0-7 No function 8-99 Strobe (from slow to fast) 100-149 Strobe (from fast to slow) 150-199 Strobe effect 1 200-245 Strobe effect 2 246-255 Strobe, the fastest strobe effect</p>	 <p>0-7 No function 8-255 color auto</p>	 <p>0-7 No function 8-199 color auto speed 200-255 Sound control</p>

## Fixture Cleaning

The cleaning of internal must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.