

## HighNoon 10w RGBW LED

1	0-255	Red ( 0-Black , 255-100% Red )
2		<u>Green LED</u> :
	0-255	Green ( 0-Black , 255-100% Green )
3		<u>Blue LED</u> :
	0-255	Blue ( 0-Black , 255-100% Blue )
4		<u>White LED</u>
	0-255	White ( 0-Black , 255-100% white )
5		<u>Dimmer intensity:</u>
	0-255	Intensity 0 to 100%
6		<u>Shutter, strobe:</u>
	0-255	Strobe effect slow to fast
7		<u>Rainbow:</u>
	0-127	Cross fading colors from slow to fast
	28-255	Jumping colors from slow to fast

### **4. Trouble shooting**

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

#### **A. The unit does not work, no light and the fan does not work**

1. Check the connection of power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

#### **B. Not responding to DMX controller**

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.