

CHAUVET GEYSER P7



15CH MODE

CHANNEL	FUNCTION	VALUE/RANGE	PERCENT/SETTING
1	FOG OUTPUT	000 ↵ 009	NO FUNCTION
		010 ↵ 255	0-100%
2	ZONE 1 RED	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
3	ZONE 1 GREEN	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
4	ZONE 1 BLUE	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
5	ZONE 1 AMBER	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
6	ZONE 1 ULTRAVIOLET	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
7	ZONE 2 RED	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
8	ZONE 2 GREEN	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
9	ZONE 2 BLUE	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
10	ZONE 2 AMBER	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
11	ZONE 2 ULTRAVIOLET	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%
12	COLOUR MACRO	000 ↵ 009	NO FUNCTION
		010 ↵ 255	0-100%
13	COLOUR MACRO SPEED	000 ↵ 009	NO FUNCTION
		010 ↵ 255	0-100%
14	STROBE	000 ↵ 009	NO FUNCTION
		010 ↵ 255	0-100%
15	DIMMER	000 ↵ 014	NO FUNCTION
		015 ↵ 255	0-100%