

HIGH NOON 10.1W RGBW LED

WITH IP RATED DMX CONNECTORS



D MODE - 4CH

CHANNEL	FUNCTION	VALUE/RANGE	PERCENT/SETTING
1	RED	000 ↔ 255	0-BLACK, 255-100% RED
2	GREEN	000 ↔ 255	0-BLACK, 255-100% GREEN
3	BLUE	000 ↔ 255	0-BLACK, 255-100% BLUE
4	WHITE	000 ↔ 255	0-BLACK, 255-100% WHITE

A MODE - 8CH

CHANNEL	FUNCTION	VALUE/RANGE	PERCENT/SETTING
1	DIMMER INTENSITY	000 ↔ 255	Intensity 0 to 100%
2	RED	000 ↔ 255	0-BLACK, 255-100% RED
3	GREEN	000 ↔ 255	0-BLACK, 255-100% GREEN
4	BLUE	000 ↔ 255	0-BLACK, 255-100% BLUE
5	WHITE	000 ↔ 255	0-BLACK, 255-100% WHITE
6	SHUTTER STROBE	000 ↔ 255	Strobe effect slow to fast
7	RESERVED		
8			

MENU READOUT

NO.	DISPLAY	FUNCTION DESCRIPTION
1	D.001	4 CHANNEL MODE, PRESS UP/DOWN BUTTON TO CHANGE ADDRESS
2	A.001	8 CHANNEL MODE, PRESS UP/DOWN BUTTON TO CHANGE ADDRESS
3	R.000	RED, (000-255) PRESS UP/DOWN BUTTON TO CHANGE BRIGHTNESS
4	G.000	BLUE, (000-255) PRESS UP/DOWN BUTTON TO CHANGE BRIGHTNESS
5	B.000	GREEN, (000-255) PRESS UP/DOWN BUTTON TO CHANGE BRIGHTNESS
6	U.000	WHITE, (000-255) PRESS UP/DOWN BUTTON TO CHANGE BRIGHTNESS
7	FH.00	STROBE, (1-99) PRESS UP/DOWN BUTTON TO CHANGE SPEED
8	CL.01	MANUAL COLOUR, (1-9) PRESS UP/DOWN BUTTON TO CHANGE COLOUR
9	CC.71	COLOUR JUMP, (1-99) PRESS UP/DOWN BUTTON TO CHANGE SPEED
10	dE.72	COLOUR FADE, (1-99) PRESS UP/DOWN BUTTON TO CHANGE SPEED
11	CP.73	PULSE CHANGE, (1-99) PRESS UP/DOWN BUTTON TO CHANGE SPEED
12	SOU.9	SOUND CONTROL