

PROSHOP LED TRUSS MATE



3CH MODE

CHANNEL	FUNCTION	VALUE/RANGE	PERCENT/SETTING
1	RED	000 ⇄ 255	0-BLACK, 255-100% RED
2	GREEN	000 ⇄ 255	0-BLACK, 255-100% GREEN
3	BLUE	000 ⇄ 255	0-BLACK, 255-100% BLUE

8CH MODE

CHANNEL	FUNCTION	VALUE/RANGE	PERCENT/SETTING
1	RED	000 ⇄ 255	0-BLACK, 255-100% RED
2	GREEN	000 ⇄ 255	0-BLACK, 255-100% GREEN
3	BLUE	000 ⇄ 255	0-BLACK, 255-100% BLUE
4	COLOUR	000 ⇄ 015	NO FUNCTION
		016 ⇄ 255	COLOUR MACROS
5	STROBE	000 ⇄ 015	NO FUNCTION
		016 ⇄ 255	STROBE SLOW TO FAST
6	PROGRAMS	000 ⇄ 031	NO FUNCTION
		032 ⇄ 063	0-100%
		064 ⇄ 095	100%-0
		096 ⇄ 127	100%-0-100%
		128 ⇄ 159	COLOUR FADE
		160 ⇄ 191	3 COLOUR SNAP
		192 ⇄ 223	7 COLOUR SNAP
224 ⇄ 255	SOUND CONTROL		
7	DIMMER	000 ⇄ 255	INTENSITY 0 TO 100%
8	DIMMER MODE	000 ⇄ 051	DIMMER MODE FOLLOWS MENU
		052 ⇄ 101	DIMMER MODE OFF
		102 ⇄ 152	DIMMER MODE 1
		153 ⇄ 203	DIMMER MODE 2
		204 ⇄ 255	DIMMER MODE 3